



User's manual

# EIO Push Chair

---



**! WARNING:** AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT.

NEVER LEAVE CHILD UNATTENDED.

ALWAYS KEEP CHILD IN VIEW.

IMPORTANT: KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

A CHILD'S SAFETY IS YOUR RESPONSIBILITY.

ALWAYS USE THE SEAT HARNESS.

ALWAYS BE SURE TO ENGAGE PARKING BRAKES WHEN IN STAND STILL  
THIS VEHICLE IS SUITABLE FOR ONE CHILD.

## IMPORTANT

- READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE.
- YOUR CHILDREN'S SAFETY MAY BE AFFECTED IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.
- APPLY BRAKE WHEN PARKING THE JOGGER.

## GENERAL INFORMATION & SAFETY

- Follow all instructions carefully. Incorrect use will cause damage to stroller.
- This product has been designed to take the maximum weight of 90lbs (40kg).
- Children should be harnessed in at all times and should never be left unattended.
- IMPORTANT - It is important for your child's safety that the harness be correctly fitted and adjusted. If not adjusted correctly in accordance with the instructions, the stability of the stroller will be compromised.
- The harness and seat belt are not a substitute for proper adult supervision.
- The child should be clear of moving parts while making adjustments.
- IMPORTANT - DANGER: It is important that care is taken to ensure that children are kept clear of the stroller when folding or unfolding. Pinch points and scissoring actions are unavoidable during these operations.
- Do not carry additional children, goods or accessories in or on this stroller except as permitted in this manual. They may cause the stroller to become unstable or place unneeded stress on the stroller that could lead to breakage.
- Overloading, incorrect folding and the use of accessories, e.g. child seats, bag hooks, rain covers, buggy boards, etc., other than those approved by the manufacturer may damage or break this stroller.
- Any damage caused by the use of accessories not supplied by manufacturer will not be covered by the terms of our warranty.
- Never leave child in the stroller when ascending or descending stairs or escalators or when travelling on other forms of transport.
- The stroller should always open and fold easily. Do not force it. It maybe necessary to re-read the instructions.
- Negotiate curbs and rough ground carefully. Repeated impact will cause damage to the stroller.
- Never allow children to stand on the footrest.
- Do not leave the stroller exposed to heat, i.e., by a radiator or in direct sunlight.
- Do not place items on the top of the hood as it may cause damage to the canopy.

## PARTS



REAR AXEL



FOOTWELL



FRONT WHEELS



REAR WHEELS



CANOPY



LATERAL PADS



SEAT FABRIC




FRAME  
& SHOPPING  
POCKET



NOTE: THIS PART IS JUST PACKING MATERIAL


## 1. FRAME

Open frame in the upright position.  
When primary & secondary lock is engaged,  
an audible CLICK will be heard.

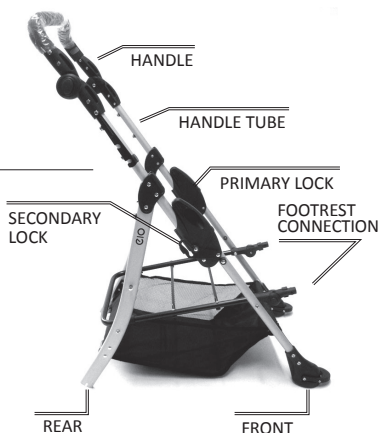

## 2. REAR AXEL

Push rear frame legs into rear axel.  
When lock is engaged, an audible CLICK will be heard.

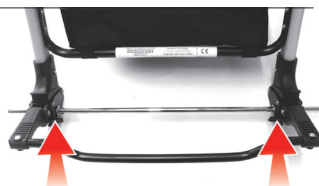

## 3. REAR WHEELS

Push rear wheel onto left rear axel. Repeat for right.  
When lock is engaged, an audible CLICK will be heard.



## 4. FRONT WHEELS

Push front left wheel up into front frame leg. Repeat for right.  
Lubricate sparingly with Teflon or silicone coating.  
When lock is engaged, audible CLICK will be heard.




## 5. FOOTREST

Orient footrest so that it is facing up. Push right and left footrest  
tubes into the frame at the same time.  
When lock is engaged, an audible CLICK will be heard.



## 6. SEAT FABRIC

Double button on the handle tube (right & left sides).  
When button is engaged, an audible SNAP will be heard.

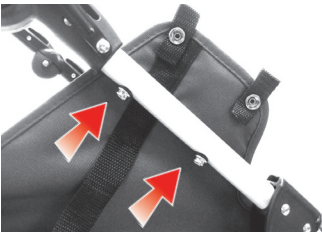

## A. SEAT FABRIC

Button support straps to each rear leg.  
When button is engaged, an audible SNAP will be heard.



## B. UNDER SEAT FRAME STRAPS X2


FRONT STRAP  
(above bolt, below  
footwell adjustment)

REAR STRAP



## C. IMPORTANT: UNDER SEAT STRAP “D” RINGS

Thread up through the bottom, then down  
through the top.

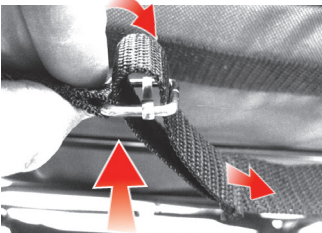

## D. UNDER SEAT STRAP “D” RINGS

Loose tail of under seat strap should be positioned  
between the taught strap and the seat bottom.  
DO NOT overtighten.



## E. FOOTWELL SNAPS X2

Button footwell fabric to footwell snaps.  
When button is engaged, an audible SNAP will be heard.



## F. FOOTWELL VELCRO X2

Wrap velcro around footwell frame and fasten.  
Repeat for right.




## G. SIDE SADDLE BAGS

Fold over primary frame locks and velcro down.  
Repeat for right.




## 7. CANOPY

- (A) Slide canopy clip down into frame connector. Do Not force. Be sure clip is clear of fabric obstruction. Repeat for left. When lock is engaged, an audible CLICK will be heard.
- (B) To remove canopy- press down clip then slide upward.

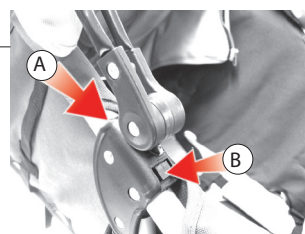


## CANOPY SNAP & ZIPPER

Fasten stabilization snaps and zipper the canopy sides.  
Zipper and snap should be positioned just below the handle adjustment button.  
Repeat for left.  
NOTE: You can remove the rear half of the canopy by unzipping the center seam.

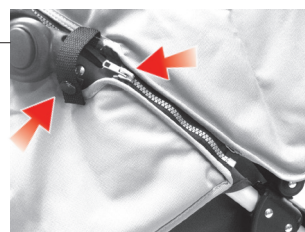

## 8. PADDED LATERALS X4

Feed both velcro straps through slots located at the edges of seat & back surface.

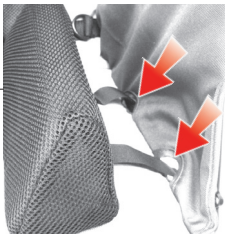

## LATERAL VELCRO STRAPS

Pull velcro straps through to the outside of the seating (or back) surface. Then wrap around frame and fasten. Repeat for all straps.




## 9. SEAT BELT / SHOULDER HARNESS / FOOT BLOCK OPERATION


**WARNING:** AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT.  
ALWAYS USE THE CROTCH STRAP IN COMBINATION WITH THE  
WAIST BELT AND SHOULDER STRAPS.

### 9.A HEIGHT-ADJUSTABLE SHOULDER STRAPS

Unclick chest pad clip then feed straps down through backrest loops to adjust the shoulder strap anchor point. Reconnect chest pad clip.

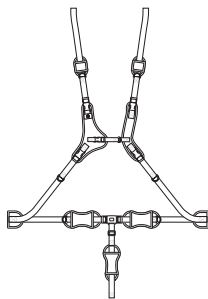


CHEST PAD CLIP

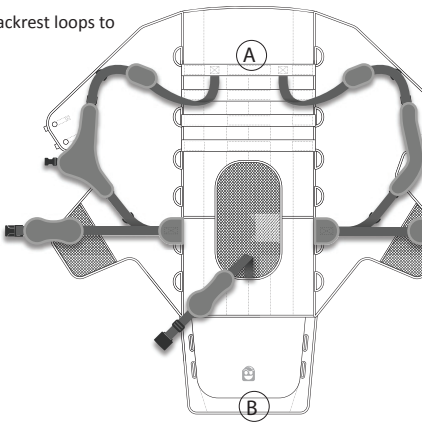

### 9.B HEIGHT-ADJUSTABLE FOOT BLOCK

Feed straps through footwell fabric slots and around the footwell frame. Fasten clips around the back side and tighten.

See installed on next page.

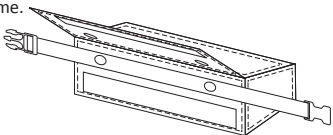

## 9.B HEIGHT-ADJUSTABLE FOOT BLOCK

Foot block shown installed.

NOTE: Block can be adjusted higher or lower.



## 11. PARKING BREAK

Using foot, push up to disengage and press down to engage.



## 12. RECLINE STRAP

UP: Push up on recline buckle and pull down on strap.

DOWN: Pinch arrow button on recline buckle and pull down.



## 13. FOOTWELL ANGLE

To adjust footwell angle, press the button on both sides simultaneously.

An audible CLICK will be heard when lock is engaged.



## 14. FRONT WHEEL SWIVEL LOCKS

To engage front wheel swivel locks, press tab up to unlock and press tab down to engage. Repeat for left.

An audible CLICK will be heard when lock is engaged.

NOTE: For lock to engage, front wheels must be facing forward.





## 15. FOLDING

---

- (A) Fully recline stroller
- (B) Disengage rear canopy hood from seat back
- (C) Place handle in upright position
- (D) Unlock front swivel wheels (both sides facing forward)
- (E) Place footwell in down position
- (F) Standing behind the push chair, Lift up on primary locks (both sides) & secondary lock (right side).



## FOLDING

---

- (A) Primary locks will disengage
- (B) Push down on handle of EIO



## FOLDING

---

- (A) Engage closure clip





## LIMITED WARRANTY

Bergeron by Design warrants to the original retail purchaser of the Special Tomato® product, that if any part or component proves defective in material or workmanship within two years of the purchase date, the defective part will be repaired or replaced [ at Bergeron by Design's discretion ] free of charge. Warranty service may be performed by an authorized service center or [ at Bergeron by Design's discretion ] the factory.

This warranty does not cover normal wear and tear, or damage caused by accident or misuse.

To exercise this limited warranty, the user should first obtain a Return Authorization Number from the dealer the Special Tomato® product was purchased from. The product must be delivered charges pre-paid [ UPS recommended ] to the factory or to an authorized service center, together with a copy of the original invoice, the Return Authorization Number and a written description of the problem

## MAINTENANCE AND REPAIR

This stroller requires regular maintenance by the user. Regularly check all rivets and connecting devices for tightness and security. Inspect all brakes, wheels and tires and replace or repair if necessary. Check all safety devices for correct operation, in particular the primary and secondary locks. These should be free to move at all times. Never continue to use a product that is not structurally sound.

- We recommend a service every 12 months.
- If wheels squeak, lubricate sparingly with Teflon or silicone coating. Do NOT use oil or grease based products, as this will attract dirt, which will clog the movement.
- Only manufacturer replacement parts should be used. It may be unsafe to use parts not supplied by manufacturer.

## CLEANING

- Clean frame with a damp cloth and a mild detergent and dry thoroughly.
- If the stroller chassis parts have been exposed to salt water, we recommend that they be rinsed down with fresh (tap) water as soon as possible.
- The canopy may be sponged lightly using a damp cloth and a mild detergent. The seat cover, head cushion, lateral pads and harness pads maybe washed. Line dry thoroughly before reuse.
- Do not fold or store the product while wet and never store in a damp environment, This can cause mildew to form.

The manufacturer reserves the right to make design changes to any of their products as part of their continuous design improvement program.

## CUSTOMER SERVICE

Contact your dealer directly. Or contact the European Authorized Representative.

## NOTICE

No part of this document may be photocopied, reproduced, transmitted, transcribed, stored in a retrieval system or translated to another language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise without the prior written consent of Bergeron by Design.

Use only Special Tomato® accessories and parts on Special Tomato® products. Special Tomato® parts are not interchangeable with other manufactures' products. Replace any worn parts immediately for safety. © Bergeron By Design



IMPORTANT- WARRANTY WILL BE VOID IF DEFACED OR REMOVED

Your stroller is guaranteed to be free from any manufacturing defects for a period of 2 years from the date of purchase under normal use and provided it is used in compliance with the operating instructions. This warranty extends only to the original retail purchaser and is only valid when supplied with proof of purchase. Please retain proof of purchase with this Limited Warranty.

Should a repair be needed please contact the retailer from whom the product was purchased.

### PLEASE NOTE THAT THE WARRANTY WILL NOT BE APPLICABLE IF:

- A fault is the cause of misuse or poor maintenance.
- Repairs are carried out by a third party.
- The stroller is faulty due to general wear and tear which is the result of everyday use.
- A stroller is damaged as a result of an accident.
- The manufacturer is not satisfied that the stated warranty terms and conditions have been met.



**MANUFACTURED BY:**  
BERGERON HEALTH CARE  
15 SOUTH SECOND STREET  
DOLGEVILLE, NY 13329

**PRODUCT CODE:**  
63200000

**PRODUCT DESCRIPTION:**  
FIO PUSH CHAIR

**COUNTRY OF ORIGIN:**  
CHINA

**AUTHORISED  
EUROPEAN  
REPRESENTATIVE:**

GLOBAL CARE AD  
ROSENWANGS ALLE 32  
82603 WIRY J  
DENMARK  
TEL: +45 24 66 55 50  
WEB: [www.globalcaread.com](http://www.globalcaread.com)



Date: . . . . . d.



© 2009 Bergeron By Design

The information contained herein is subject to change without notice.  
Bergeron By Design shall not be liable for technical errors or omissions herein.